

TABLE OF CONTENTS

1 SAFETY

INTRODUCTION	1-1
CLEANING, WAXING, & POLISHING	1-1
CONTROLLING CORROSION	1-1
PROPELLERS	1-2
FUEL SYSTEM	1-7
LOADING	1-9
HORSEPOWER	1-10
FLOTATION	1-10
EMERGENCY EQUIPMENT	1-12
COMPASS	1-14
ANCHORS	1-16
MISCELLANEOUS EQUIPMENT	1-17
BOATING ACCIDENT REPORTS	1-18
NAVIGATION	1-18

2 TUNING

INTRODUCTION	2-1
TUNE-UP SEQUENCE	2-2
COMPRESSION CHECK	2-3
SPARK PLUG INSPECTION	2-3
IGNITION SYSTEM	2-4
TIMING AND SYNCHRONIZING	2-5
CARBURETOR ADJUSTMENT	2-7
FUEL PUMPS	2-9
CRANKING MOTOR AND SOLENOID	2-10
INTERNAL WIRING HARNESS	2-11
WATER PUMP CHECK	2-12
PROPELLER	2-13
LOWER UNIT	2-15
BOAT TESTING	2-16

3 POWERHEAD

INTRODUCTION	3-1
Chapter Organization	3-3
POWERHEAD SERVICE -- ORIGINAL	
DESIGN (See Listing on Page)	3-5
Removal	3-5
Disassembling	3-7
Cleaning & Inspecting	3-66
Assembling	3-14
Installation	3-25

POWERHEAD SERVICE -- REDESIGNED

MODEL (See Listing on Page)	3-27
Removal	3-27
Disassembling	3-32
Cleaning & Inspecting	3-66
Assembling	3-48
Installation	3-60

CLEANING & INSPECTING

Thermostat Service	3-66
Reed Block Service	3-66
Crankshaft Service	3-68
Connecting Rod Service	3-70
Piston Service	3-72
Honing Procedures	3-74
Cylinder Block Service	3-75
Check valves	3-76

4 FUEL

INTRODUCTION	4-1
GENERAL CARBURETION INFORMATION	4-1
TROUBLESHOOTING	4-4
"Sour" Fuel	4-4
Leaded Gasoline & Gasohol	4-5
Removing Fuel From the System	4-5
Fuel Pump Test	4-7
Fuel Line Test	4-9
Rough Engine Idle	4-10
Excessive Fuel Consumption	4-10
Engine Surge	4-11
Anti-Syphon Valve	4-11
ENRICHENER SYSTEM	4-11
2+2 SYSTEM W/ACCELERATOR PUMP -- 100 & 115HP	4-12
CARBURETOR IDENTIFICATION	4-13

REFERENCED "A" - SIDE BOWL AND BACK DRAG	4-14
Removal & Disassembling	4-14
Cleaning & Inspecting	4-16
Assembling	4-19
Installation	4-21
Adjustments	4-23

4 FUEL (Continued)

REFERENCED "B" W/INTEGRAL FUEL PUMP	4-24
Removal & Disassembling	4-24
Cleaning & Inspecting	4-26
Assembling	4-27
Installation	4-29
Adjustments	4-30
REFERENCED "C" - CENTER SQUARE BOWL	4-31
Removal & Disassembling	4-31
Cleaning & Inspecting	4-34
Assembling	4-36
Installation	4-38
Operating Adjustments	4-39
REFERENCED "D" SERIES WME CENTER SQUARE BOWL	4-41
Removal & Disassembling	4-41
Cleaning & Inspecting	4-43
Assembling	4-45
Installation	4-46
Adjustments	4-47
FUEL PUMP	4-47
Theory of Operation	4-47
Pump Pressure Check	4-49
Removal	4-50
Cleaning & Inspecting	4-51
Assembling	4-51
OIL INJECTION -- AUTO BLEND	4-53
Description	4-53
Troubleshooting	4-55
Preparation for Use	
Auto Blend	4-58
OIL INJECTION -- ADVANCED	4-59
Description	4-59
Filling System	4-60
Purging System	4-61
Troubleshooting	4-61
Servicing System	4-63
Disassembling	4-64
Cleaning & Inspecting	4-65
Assembling	4-67
Installation	4-69

5 IGNITION

INTRODUCTION	5-1
SPARK PLUG EVALUATION	5-2
POLARITY CHECK	5-4
WIRING HARNESS	5-5
TYPE I - DISTRIBUTOR MAGNETO WITH POINTS	5-6
Description & Operation	5-6
Troubleshooting	5-8
Servicing	5-12

Cleaning & Inspecting	5-14
Assembling	5-17
TYPE II - THUNDERBOLT - DISTRIBUTOR LIGHTNING ENERGIZER - POINTLESS AKA ALTERNATOR DRIVER	
IGNITION (ADI)	5-23
Description	5-23
Troubleshooting	5-23
Removal	5-26
Cleaning & Inspecting	5-28
Assembling	5-28
Installation	5-29
TYPE III - THUNDERBOLT - DISTRIBUTOR C.D. - POINTLESS	5-31
Description	5-31
Troubleshooting	5-33
Servicing	5-34
Removal	5-37
Cleaning & Inspecting	5-38
Assembling	5-38
TYPE IV - THUNDERBOLT - FLYWHEEL - C.D. - POINTLESS	5-40
Description & Operation	5-40
Troubleshooting	5-41
Servicing	5-43
Removal	5-43
Installation	5-44
TYPE V - THUNDERBOLT - FLYWHEEL - C.D. - COIL PER CYLINDER	5-45
Description & Operation	5-45
Troubleshooting	5-46
Servicing	5-54
Removal & Disassembling	5-54
Cleaning & Inspecting	5-56
Assembling & Installation	5-57

6 TIMING AND SYNCHRONIZING

INTRODUCTION & PREPARATION	6-1
MODEL 500 1965-1967 and 1968 to Serial No. 2306755	6-3
MODEL 500S No. 2306756 and Up Mid 1968	
MODEL 500M No. 2307056 and Up Mid 1968	
MODEL 500E No. 2406035 and Up Mid 1968 to 1975	
MODEL 650S No. 2312311 to 2446775 Mid 1968 and 1969	
MODEL 650E No. 2446775 to 2606853 Mid 1968 and 1969	6-4
MODEL 500 1975	6-7
MODEL 500 1976 to No. 4576236	6-10

MODEL 500 No. 4576237 and Up 1977 to 1979	
MODEL 50HP Since 1979	
MODEL 45HP 1986 to 1989	
MODEL 40HP Since 1990	6-11
MODEL 650 1965 and 1966	
MODEL 650E 1968 to No. 2446744	
MODEL 650S 1968 to No. 2312310	6-13
MODEL 650 1970 and 1971	
MODEL 800 1969 to 1972	
MODEL 850 1973	6-15
MODEL 650 1972 to 1975	6-17
MODEL 650 1976	6-19
MODEL 700 1977 to 1979	
MODEL 70HP 1979 to 1983	
MODEL 60HP 1984 to 1990	
MODEL 50HP 1986 to 1990	6-21
MODEL 850 1974 and 1975 To No. 4366801	6-23
MODEL 800 1978 and 1979	
MODEL 850 1976 and 1977 No. 4366802 and Above	
MODEL 80HP 1979 to 1983	
MODEL 75HP 1984 to 86	6-25
MODEL 90HP Since 1987	
MODEL 70HP, & 80HP 1987 to 1989	
MODEL 75HP Since 1990	
MODEL 50HP Since 1991	
MODEL 60HP Since 1991	6-27
MODEL 100HP Since 1988	
ALSO MODEL 115HP Since 1989	6-29

7 ELECTRICAL

INTRODUCTION	7-1
BATTERIES	7-1
GAUGES AND HORNS	7-7
Temperature Gauges	7-8
Warning Lights	7-8
Fuel Gauges	7-9
Tachometer	7-11
Horns	7-11
ELECTRICAL SYSTEM	7-12
General Information	7-12
CHARGING CIRCUIT SERVICE	7-13
Troubleshooting	7-14
Rectifier Removal	7-15
Rectifier Installation	7-17

STATOR SERVICE	7-17
Removal	7-18
Installation	7-18
CHOKE CIRCUIT AND ENRICHENER SYSTEM	7-19
CRANKING MOTOR CIRCUIT	7-20
Description & Operation	7-20
Troubleshooting	7-21
Removal	7-25
Disassembling - Pinion Gear with Rubber Cushion	7-26
Assembling	7-26
Disassembling - Pinion Gear with Snap Ring or Nut	7-27
Assembling	7-28
Disassembling - Pinion Gear with Top Spring	7-29
Assembling	7-30
CRANKING MOTOR REPAIR	7-30
Disassembling	7-31
Testing Parts	7-32
Cleaning & Inspecting	7-34
Assembling a Bosch	7-39
Assembling a Delco Remy	7-39

8 REMOTE CONTROLS

INTRODUCTION	8-1
STEERING SYSTEMS	8-1
DIRECTIONAL INDICATOR	8-2
ROTARY STEERING SERVICE	8-5
Disassembling	8-5
Cleaning & Inspecting	8-5
Assembling	8-6
STANDARD RIDE GUIDE KIT	8-8
CUSTOM RIDE GUIDE KIT	8-8
MERCONTROL PANEL	
EARLY MODEL	8-8
Disassembling	8-8
Assembling	8-11
MERCONTROL BOX LATE MODEL	8-13
Disassembling	8-13
Assembling	8-16
COMMANDER CONTROL BOX	
Removal & Disassembling	8-17
Cleaning & Inspecting	8-24
Assembling & Installation	8-26
CABLE ADJUSTMENTS	8-35

9 POWER TRIM/TILT

INTRODUCTION	9-1
Chapter Organization	9-2
MECHANICAL TILT PIN	9-2

9 POWER TRIM/TILT (Continued)

SYSTEM "A" - MODELS WITH TWO TRIM/TILT CYLINDERS	9-3
Description & Operation	9-3
Special Instructions	9-5
Bleeding	9-6
Troubleshooting	9-8
Trim Switch Service	9-8
Service System "A"	9-12
Hydraulic Pump Service	9-14
Electric Motor Service	9-17

SYSTEM "B" - MODELS WITH TWO TRIM CYLINDERS AND ONE TILT CYLINDER	9-21
Description & Operation	9-21
Bleeding	9-22
Flushing	9-23
Troubleshooting	9-24
Removal & Disassembling	9-31
Manual Release Valve	9-34
Oil Reservoir Cover	9-35
Trim Cylinders	9-35
Tilt Cylinder	9-36
Motor & Pump	9-36
Cleaning & Inspecting	9-37
Assembling & Installation	9-38
Pump & Motor	9-42
Tilt Cylinder	9-45
Trim Cylinders	9-48
Reservoir Cover	9-49
Manual Release Valve	9-49
System Installation	9-50

10 LOWER UNIT

DESCRIPTION	10-1
CHAPTER COVERAGE	10-1
TROUBLESHOOTING	10-4
REMOVAL -- ALL UNITS	10-5
Propeller Removal	10-7
WATER PUMP SERVICE	
Removal and Disassembling	
High Pressure Type Pump	10-8
High Volume Type Pump	10-9
SERVICING CAM-SHIFT TYPE I UNITS MATCHED WITH EARLY 3-CYLINDER POWERHEADS TO ABOUT 1979	10-11
Removal	
Bearing Carrier and Propeller Shaft	10-12
Driveshaft & Bearing	10-13
Forward Gear & Bearing	10-15

Disassembling	
Bearing Carrier	10-16
Propeller Shaft	10-17
Driveshaft	10-17

Assembling	
Lower Driveshaft Bearing	10-22
Shift Shaft	10-22
Bearing Carrier	10-23
Forward Gear & Bearing	10-24
Forward Bearing Race	10-25
Driveshaft	10-26
Shimming & Backlash	
Pinion Gear Depth	10-28
Forward Gear Backlash	10-29
Assembling & Installation	
Bearing Carrier	10-32
Reverse Gear Backlash	10-33

SERVICING CAM-SHIFT TYPE II UNITS MATCHED WITH LATE 3- and 4-CYLINDER POWERHEADS SINCE ABOUT 1980	10-34
Removal and Disassembling	
Bearing Carrier	10-35
Propeller Shaft	10-36
Shift Shaft	10-37
Pinion Gear	10-38
Driveshaft	10-38
Forward Gear	10-39
Pinion Gear Bearing Race	10-40
Forward Bearing Race	10-40
Driveshaft Bearing	10-40
Assembling and Installation	
Driveshaft Bearing	10-41
Pinion Gear Bearing Race	10-44
Forward Gear Bearing Race	10-44
Shift Shaft	10-45
Forward Gear	10-45
Driveshaft	10-46
Pinion Gear	10-46
Propeller Shaft	10-47
Bearing Carrier	10-48
Pinion Gear Depth	10-49
Forward Gear Backlash	10-50

WATER PUMP ASSEMBLING AND INSTALLATION	
High Pressure Type Pump	10-52
Shimming (Certain Units)	10-52
High Volume Type Pump	10-56
CLEANING AND INSPECTING ALL UNITS	10-57

LOWER UNIT INSTALLATION	10-60
Filling Lower Unit	10-60
Exhaust Tube Installation	10-61
Propeller Installation	10-64

11 HAND REWIND STARTER

INTRODUCTION

TYPE "A" (See Introduction)	11-2
Removal and Disassembling	11-2
Cleaning and Inspecting	11-4
Assembling and Installation	11-6

Type "B" (See Introduction)

Removal and Disassembling	11-13
Cleaning and Inspecting	11-16
Assembling and Installation	11-17

12 MAINTENANCE

INTRODUCTION	12-1
OUTBOARD SERIAL NUMBERS	12-2
LUBRICATION - COMPLETE UNIT	12-2
PRE-SEASON PREPARATION	12-3
Units With Oil Injection	12-4
All Units	12-5
FIBERGLASS HULLS	12-10
BELOW WATERLINE SERVICE	12-10
SUBMERGED ENGINE SERVICE	12-11
Salt Water Submersion	12-11
Fresh Water Submersion	12-12

PROPELLER SERVICE	12-13
POWER TRIM/TILT	12-15
INSIDE THE BOAT	12-16
LOWER UNIT	12-16
WINTER STORAGE	12-18
Units With Oil Injection	12-19
Battery Storage	12-20

APPENDIX

METRIC CONVERSION CHART	A-1
ENGINE SPECIFICATIONS	
AND TUNE-UP ADJ.	A-2 thru A-12
REED STOP OPENING	A-13
CARBURETOR JET SIZE/ ELEVATION CHART	A-14
LOWER UNIT BACKLASH TABLE	A-16
LOWER UNIT OIL CAPACITY AND GEAR CHART	A-17
PISTON & CYLINDER SPECIFICATIONS	A-18
WIRE IDENTIFICATION DWGS.	
Ignition Systems	A-19 thru A-39
Power Trim/Tilt	A-40
Remote Controls	A-43
Console Wiring	A-47