

CONTENTS

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		SAFETY IN SERVICE	1-11
		TROUBLESHOOTING	1-11
		TOOLS AND EQUIPMENT	1-15
		TOOLS	1-17
		FASTENERS, MEASUREMENTS AND CONVERSIONS SPECIFICATIONS	1-24 1-25
2	ENGINE AND DRIVE MAINTENANCE	ENGINE AND DRIVE MAINTENANCE	2-2
		FLUIDS AND LUBRICANTS	2-33
		LUBRICATION POINTS	2-47
		BOAT MAINTENANCE	2-49
		WINTER STORAGE	2-53
		FIRING ORDERS	2-54
		SPRING COMMISSIONING SPECIFICATIONS	2-54 2-56
3	ENGINE MECHANICAL 4 CYLINDER	ENGINE MECHANICAL	3-2
		EXPLODED VIEWS	3-16
		SPECIFICATIONS	3-19
4	ENGINE MECHANICAL GM V6 AND V8 ENGINES	ENGINE MECHANICAL	4-2
		EXPLODED VIEWS	4-36
		SPECIFICATIONS	4-41
5	ENGINE MECHANICAL FORD V8 ENGINES	ENGINE MECHANICAL	5-2
		EXPLODED VIEWS	5-21
		SPECIFICATIONS	5-23
6	ENGINE OVERHAUL	ENGINE RECONDITIONING	6-2
7	FUEL SYSTEMS CARBURETORS	FUEL AND COMBUSTION	7-2
		CARBURETED FUEL SYSTEM	7-3
		ROCHESTER 2-GE AND NIKKI 2BBL	7-6
		ROCHESTER 4ME 4BBL	7-10
		HOLLEY 2010 2BBL	7-16
		HOLLEY 2300 2BBL	7-20
		HOLLEY 4011 4BBL	7-25
		HOLLEY 4150/4160/4175 4BBL	7-32
		WIRING DIAGRAMS	7-44
		SPECIFICATIONS	7-46
8	FUEL SYSTEMS FUEL INJECTION	FUEL AND COMBUSTION	8-2
		FORD ELECTRONIC MULTI-POINT FUEL INJECTION (MFI)	8-3
		GM THROTTLE BODY FUEL INJECTION (TBI)	8-20
		GM MULTI-POINT FUEL INJECTION (MFI)	8-20
		WIRING SCHEMATICS	8-62
		ECM PIN LOCATIONS	8-74
		DIAGNOSTIC TROUBLE CODE (DTC) CHARTS	8-79
		FUEL FLOW DIAGRAMS	8-81
		COMPONENT LOCATIONS	8-84
		TORQUE SPECIFICATIONS	8-87

CONTENTS

COOLING SYSTEMS	9-2
MAINTENANCE AND TESTING	9-3
FLOW DIAGRAMS	9-8

COOLING SYSTEM

9

UNDERSTANDING AND TROUBLESHOOTING	
ELECTRICAL SYSTEMS	10-2
CHARGING SYSTEM	10-10
STARTER CIRCUIT	10-20
IGNITION SYSTEM	10-30
BREAKER POINT IGNITION SYSTEM	10-31
DISTRIBUTOR IGNITION (DI) SYSTEM	10-38
ELECTRONIC SPARK TIMING (EST) SYSTEM	10-38
BREAKERLESS INDUCTIVE DISTRIBUTOR (BID)	10-45
VOLVO ELECTRONIC ENGINE MANAGEMENT (EMM) SYSTEM	10-49
FORD THICK FILM INTEGRATED IGNITION SYSTEM (TFI-IV)	10-50
DISTRIBUTORLESS ELECTRONIC IGNITION (EI) SYSTEM	10-54
INSTRUMENTS AND GAUGES	10-56
SENDING UNITS AND SWITCHES	10-58
WIRING DIAGRAMS	10-60
SPECIFICATIONS	10-118

IGNITION AND ELECTRICAL SYSTEMS

10

STERN DRIVE UNIT—280/290, SP, DP & DPX	11-2
UPPER GEAR HOUSING	11-6
INTERMEDIATE HOUSING	11-16
GEAR HOUSING (LOWER UNIT)	11-19
TRANSOM SHIELD	11-26
SPECIFICATIONS	12-25

STERN DRIVE 280/290, SP, DP & DPX

11

STERN DRIVE UNIT—SX & DP-S	12-2
UPPER GEAR HOUSING	12-5
LOWER GEAR CASE (LOWER UNIT)	12-13
TRANSOM ASSEMBLY	12-17
SPECIFICATIONS	12-25

STERN DRIVE SX & DP-S

12

PJX WATERJET	13-2
--------------	------

JET DRIVE

13

ELECTRO-MECHANICAL TILT SYSTEM—280 & DP	14-2
POWER TRIM AND TILT—290, SP, DP & DPX	14-5
POWER TRIM AND TILT—SX AND DP-S	14-11
WIRING SCHEMATICS	14-33

TRIM AND TILT

14

MANUAL STEERING SYSTEM	15-2
POWER STEERING SYSTEM	15-3

STEERING SYSTEM

15

MASTER INDEX	15-14
--------------	-------

MASTER INDEX

15-14 MASTER INDEX

ALTERNATOR	10-11	COOLANT FLOW DIAGRAMS	9-8
ASSEMBLY	10-19	COOLING SYSTEMS	9-2
CHARGING SYSTEM INSPECTION	10-11	DESCRIPTION & OPERATION	9-2
CLEANING & INSPECTION	10-17	DRAINING & FILLING	2-40
DISASSEMBLY	10-15	FLOW DIAGRAMS	9-8
PRECAUTIONS	10-11	FLUSHING	2-38
REMOVAL & INSTALLATION	10-15	MAINTENANCE AND TESTING	9-3
TESTING	10-11	TROUBLESHOOTING	9-3
ANODES (ZINCS)	2-50	CYLINDER COMPRESSION	2-20
BACKLASH AND SHIM ADJUSTMENTS		CYLINDER HEAD	
280/290, SP, DP & DPX	11-7	4 CYLINDER	3-15
SX/DP-S	12-7	FORD V8	5-20
BALANCE SHAFT	4-31	GM V6/V8	4-33
BASIC OPERATING PRINCIPLES	1-12	CYLINDER HEAD (VALVE) COVER	
BATTERY	2-51	4 CYLINDER	3-6
CABLES	2-53	FORD V8	5-6
CABLES	10-10	GM V6/V8	4-8
CHARGERS	2-52	DECELERATION VALVE	7-44
CHARGERS	10-10	DIAGNOSTIC TROUBLE CODE (DTC) CHARTS	8-79
CLEANING	2-51	DISTRIBUTOR AIR GAP	2-30
CONSTRUCTION	10-8	DISTRIBUTOR IGNITION (DI) SYSTEM	10-38
LOCATION	10-9	DESCRIPTION	10-38
MARINE	10-8	DISTRIBUTOR	10-42
PRECAUTIONS	2-52	DISTRIBUTOR CAP	10-42
RATINGS	10-9	IGNITION COIL	10-44
SPECIFIC GRAVITY	2-51	TROUBLESHOOTING	10-38
STORAGE	2-53	DISTRIBUTORLESS ELECTRONIC IGNITION (EI) SYSTEM	10-54
TERMINALS	2-52	CAMSHAFT POSITION SENSOR	10-55
BELTS	2-11	CRANKSHAFT POSITION SENSOR	10-55
BOAT MAINTENANCE	2-49	DESCRIPTION & OPERATION	10-54
ANODES (ZINCS)	2-50	IGNITION COILS	10-55
BATTERIES	2-51	ECM PIN LOCATIONS	8-74
INSIDE THE BOAT	2-49	ELECTRIC FUEL PUMP	7-41
THE BOAT'S EXTERIOR	2-49	ELECTRONIC SPARK TIMING (EST) SYSTEM	10-38
BOATING SAFETY	1-4	DESCRIPTION	10-38
COURTESY MARINE EXAMINATIONS	1-11	DISTRIBUTOR	10-42
EQUIPMENT NOT REQUIRED BUT RECOMMENDED	1-10	DISTRIBUTOR CAP	10-42
REGULATIONS FOR YOUR BOAT	1-4	IGNITION COIL	10-44
REQUIRED SAFETY EQUIPMENT	1-5	TROUBLESHOOTING	10-38
BOWL BEARING	13-2	ELECTRONIC TOOLS	1-21
BREAKER POINT IGNITION SYSTEM	10-31	ELECTRO-MECHANICAL TILT SYSTEM—280 AND DP	14-2
DESCRIPTION	10-31	DESCRIPTION	14-2
DISTRIBUTOR	10-34	TILT MECHANISM	14-2
DISTRIBUTOR CAP AND ROTOR	10-34	TROUBLESHOOTING	14-2
IGNITION COIL	10-37	ENGINE	
TROUBLESHOOTING	10-31	4 CYLINDER	3-3
BREAKERLESS INDUCTIVE DISTRIBUTOR (BID)	10-45	FORD V8	5-2
DESCRIPTION	10-45	GM V6/V8	4-3
DISTRIBUTOR	10-47	ENGINE AND DRIVE MAINTENANCE	2-2
DISTRIBUTOR CAP	10-47	BELTS	2-11
IGNITION COIL	10-49	BREAKER POINTS AND CONDENSER	2-29
TROUBLESHOOTING	10-45	CYLINDER COMPRESSION	2-20
CAMSHAFT		DISTRIBUTOR AIR GAP	2-30
FORD V8	5-19	FLAME ARRESTOR	2-4
GM V6/V8	4-32	FUEL FILTER	2-8
CAMSHAFT, BEARINGS AND GEAR—4 CYL	3-13	IDLE SPEED AND MIXTURE	2-31
CARBURETED FUEL SYSTEM	7-3	IGNITION TIMING	2-25
DECELERATION VALVE	7-44	OVERVIEW	2-2
ELECTRIC FUEL PUMP	7-41	PCV VALVE	2-32
HOLLEY 2010 2 BBL	7-16	SERIAL NUMBER IDENTIFICATION	2-2
HOLLEY 4011 4 BBL	7-25	SPARK PLUGS	2-21
HOLLEY 4150/4160/4175 4 BBL	7-32	SPARK PLUG WIRES	2-25
MECHANICAL FUEL PUMP	7-39	THERMOSTAT	2-16
OPERATION	7-4	VALVE ADJUSTMENT	2-33
ROCHESTER 2-GE AND NIKKI 2BBL	7-6	ENGINE CIRCULATING PUMP	
ROCHESTER 4ME 4 BBL	7-10	FORD V8	5-20
TROUBLESHOOTING	7-3	GM V6/V8	4-35
CHARGING SYSTEM	10-10	ENGINE COUPLER AND FLYWHEEL—4 CYL	3-11
GENERAL INFORMATION	10-10	ENGINE COUPLER/DAMPER—GM V6/V8	4-25
GENERAL SYSTEM TROUBLESHOOTING	10-11	ENGINE COUPLER/DAMPER AND FLYWHEEL—FORD V8	5-15
ALTERNATOR	10-11	ENGINE IDENTIFICATION	
CHEMICALS	1-15	4 CYLINDER	3-2
COMBINATION MANIFOLD	3-7	FORD V8	5-2
COMPONENT LOCATIONS	8-84	GM V6/V8	4-2

ENGINE MECHANICAL—4 CYL	3-2	REAR ENGINE MOUNTS	4-7
CAMSHAFT, BEARINGS AND GEAR	3-13	REAR MAIN OIL SEAL	4-27
COMBINATION MANIFOLD	3-7	REAR MAIN OIL SEAL RETAINER	4-26
CYLINDER HEAD	3-15	ROCKER ARMS AND PUSH RODS	4-9
CYLINDER HEAD (VALVE) COVER	3-6	TIMING CHAIN AND SPROCKETS	4-30
ENGINE	3-3	WATER PUMP	4-35
ENGINE COUPLER AND FLYWHEEL	3-11	ENGINE RECONDITIONING	6-2
ENGINE IDENTIFICATION	3-2	DETERMINING ENGINE CONDITION	6-2
EXHAUST ELBOW	3-9	BUY OR REBUILD?	6-3
EXHAUST HOSE (BELLOWS)	3-9	ENGINE OVERHAUL TIPS	6-3
EXHAUST PIPE	3-9	ENGINE PREPARATION	6-5
FRONT COVER AND OIL SEAL	3-13	CYLINDER HEAD	6-5
FRONT ENGINE MOUNTS	3-5	ENGINE BLOCK	6-13
GENERAL INFORMATION	3-2	ENGINE START-UP AND BREAK-IN	6-22
HARMONIC BALANCER, PULLEY AND HUB	3-12	EXHAUST ELBOW	
HYDRAULIC VALVE LIFTER	3-7	4 CYLINDER	3-9
OIL FILTER BYPASS VALVE	3-11	FORD V8	5-13
OIL PAN	3-10	GM V6/V8	4-20
OIL PUMP	3-10	EXHAUST HOSE (BELLOWS)	
REAR ENGINE MOUNTS	3-6	4 CYLINDER	3-9
REAR MAIN OIL SEAL	3-11	FORD V8	5-13
REAR MAIN OIL SEAL RETAINER	3-11	GM V6/V8	4-20
ROCKER ARMS AND PUSH RODS	3-6	EXHAUST MANIFOLD	
ENGINE MECHANICAL—FORD V8	5-2	FORD V8	5-13
CAMSHAFT	5-19	GM V6/V8	4-17
CYLINDER HEAD	5-20	EXHAUST PIPE	3-9
CYLINDER HEAD (VALVE) COVER	5-6	EXHAUST VALVE (FLAPPER) REPLACEMENT	3-10
ENGINE	5-2	EXPLODED VIEWS—4 CYL	3-16
ENGINE CIRCULATING PUMP	5-20	CYLINDER BLOCK	3-16
ENGINE COUPLER/DAMPER AND FLYWHEEL	5-15	CYLINDER HEAD	3-17
ENGINE IDENTIFICATION	5-2	FLYWHEEL HOUSING AND REAR MOUNTS	3-18
EXHAUST ELBOW	5-13	EXPLODED VIEWS—FORD V8	5-21
EXHAUST HOSES (BELLOWS)	5-13	CYLINDER BLOCK	5-21
EXHAUST MANIFOLD	5-13	CYLINDER HEAD	5-22
FLYWHEEL	5-15	INTAKE MANIFOLD	5-22
FRONT COVER AND OIL SEAL	5-17	EXPLODED VIEWS—GM V6/V8	4-36
FRONT ENGINE MOUNTS	5-5	CYLINDER BLOCK - V6	4-36
GENERAL INFORMATION	5-2	CYLINDER BLOCK—V8	4-36
HYDRAULIC VALVE LIFTER	5-8	CYLINDER HEAD—V6	4-37
INTAKE MANIFOLD	5-8	CYLINDER HEAD—5.0L/5.7L V8	4-37
INTERMEDIATE EXHAUST PIPE	5-13	CYLINDER HEAD—7.4L/8.2L V8	4-38
LOWER EXHAUST PIPE (Y-PIPE)	5-14	INTAKE MANIFOLD—V6 ENGINES, 5.0L/5.7L V8	
OIL PAN	5-14	AND 1992-97 7.4L/8.2L GL V8	4-38
OIL PUMP	5-15	LOWER INTAKE MANIFOLD—1995-97 7.4L/8.2L GI/GSI V8	
REAR ENGINE MOUNTS	5-6	AND 1998-03 7.4L/8.1L/8.2L GSI V8	4-39
REAR MAIN OIL SEAL	5-17	LOWER INTAKE MANIFOLD—	
ROCKER ARMS AND PUSH RODS	5-7	1998-03 7.4L/8.1L/8.2L GI V8	4-40
TIMING CHAIN AND SPROCKETS	5-18	UPPER INTAKE MANIFOLD—1995-97 7.4L/8.2L GI/GSI V8	
VIBRATION DAMPER, PULLEY AND HUB	5-17	AND 1998-03 7.4L/8.1L/8.2L GSI V8	4-39
WATER PUMP	5-20	UPPER INTAKE MANIFOLD—	
ENGINE MECHANICAL—GM V6/V8	4-2	1998-03 7.4L/8.1L/8.2L GI V8	4-40
BALANCE SHAFT	4-31	FASTENERS, MEASUREMENTS AND CONVERSIONS	1-24
CAMSHAFT	4-32	BOLTS, NUTS AND OTHER THREADED RETAINERS	1-24
CYLINDER HEAD	4-33	STANDARD AND METRIC MEASUREMENTS	1-24
CYLINDER HEAD (VALVE) COVER	4-8	TORQUE	1-24
ENGINE	4-3	FIRING ORDERS	2-54
ENGINE CIRCULATING PUMP	4-35	FLAME ARRESTOR	2-4
ENGINE COUPLER/DAMPER	4-25	FLUIDS AND LUBRICANTS	2-33
ENGINE IDENTIFICATION	4-2	COOLING SYSTEM	2-38
EXHAUST ELBOW	4-20	ENGINE	2-33
EXHAUST HOSES (BELLOWS)	4-20	FLUID DISPOSAL	2-33
EXHAUST MANIFOLD	4-17	FUEL AND OIL RECOMMENDATIONS	2-33
FLYWHEEL	4-25	POWER STEERING	2-37
FRONT COVER AND OIL SEAL	4-29	POWER TRIM PUMP	2-47
FRONT ENGINE MOUNTS	4-7	STERN DRIVE UNIT	2-43
GENERAL INFORMATION	4-2	FLYWHEEL	
HARMONIC BALANCER, PULLEY AND HUB	4-28	FORD V8	5-15
HYDRAULIC VALVE LIFTER	4-10	GM V6/V8	4-25
INTAKE MANIFOLD	4-12	FORD ELECTRONIC MULTI-POINT FUEL INJECTION (MFI)	8-3
INTERMEDIATE EXHAUST PIPE	4-20	AIR CHARGE TEMPERATURE SENSOR (ACT)	8-7
LOWER EXHAUST PIPE (Y-PIPE)	4-20	CIRCUIT BREAKER	8-8
OIL FILTER BYPASS VALVE	4-25	DESCRIPTION AND OPERATION	8-3
OIL PAN	4-21	DIAGNOSTIC TROUBLE CODES-EEC IV SYSTEM	8-16
OIL PUMP	4-23	EEC POWER RELAY	8-9

15-16 MASTER INDEX

ELECTRONIC CONTROL ASSEMBLY (ECA)	8-9	RELIEVING FUEL PRESSURE	8-24
ENGINE COOLANT TEMPERATURE SENSOR (ECT)	8-8	SYSTEM DIAGNOSIS	8-41
FUEL INJECTOR	8-9	THROTTLE BODY	8-37
FUEL PRESSURE REGULATOR	8-9	THROTTLE BODY ADAPTER PLATE	8-39
FUEL PUMP	8-10	THROTTLE POSITION SENSOR (TP)	8-39
FUEL RAIL	8-10	VAPOR SEPARATOR TANK/FUEL RESERVOIR	8-41
FUEL RESERVOIR/VAPOR SEPARATOR	8-11	HAND TOOLS	1-17
IDLE SPEED CONTROL (ISC) SOLENOID	8-11	HARMONIC BALANCER, PULLEY AND HUB	
KNOCK SENSOR (KS) AND AMPLIFIER	8-12	4 CYLINDER	3-12
MAP SENSOR	8-12	GM V6/V8	4-28
PIN LOCATIONS	8-19	HOLLEY 2010 2 BBL	7-16
RELIEVING FUEL PRESSURE	8-7	ASSEMBLY	7-19
SYSTEM DIAGNOSIS	8-13	CLEANING & INSPECTION	7-19
THROTTLE BODY	8-12	DISASSEMBLY	7-16
THROTTLE POSITION SENSOR (TP)	8-13	REMOVAL & INSTALLATION	7-16
VACUUM DIAGRAMS	8-19	HOLLEY 2300 2 BBL	7-20
FORD THICK FILM INTEGRATED		ADJUSTMENT	7-24
IGNITION SYSTEM (TFI-IV)	10-50	ASSEMBLY	7-24
DESCRIPTION & OPERATION	10-50	CLEANING & INSPECTION	7-21
DISTRIBUTOR	10-52	DISASSEMBLY	7-20
DISTRIBUTOR CAP	10-51	REMOVAL & INSTALLATION	7-20
E-CORE COIL	10-53	HOLLEY 4011 4 BBL	7-25
STATOR	10-52	REMOVAL & INSTALLATION	7-25
TFI MODULE	10-54	DISASSEMBLY	7-26
FRONT COVER AND OIL SEAL		CLEANING & INSPECTION	7-26
4 CYLINDER	3-13	ASSEMBLY	7-30
FORD V8	5-17	ADJUSTMENT	7-31
GM V6/V8	4-29	HOLLEY 4150/4160/4175 4 BBL	7-32
FRONT ENGINE MOUNTS		REMOVAL & INSTALLATION	7-32
4 CYLINDER	3-5	DISASSEMBLY	7-33
FORD V8	5-5	CLEANING & INSPECTION	7-36
GM V6/V8	4-7	ASSEMBLY	7-37
FUEL AND COMBUSTION	7-2	ADJUSTMENT	7-38
FUEL AND OIL RECOMMENDATIONS	2-33	HOW TO USE THIS MANUAL	1-2
FUEL FILTER	2-8	AVOIDING THE MOST COMMON MISTAKES	1-3
FUEL FLOW DIAGRAMS	8-81	AVOIDING TROUBLE	1-2
FUEL PUMP		CAN YOU DO IT?	1-2
ELECTRIC	7-41	DIRECTIONS AND LOCATIONS	1-2
MECHANICAL	7-39	MAINTENANCE OR REPAIR?	1-2
GEAR HOUSING (LOWER UNIT)—280/290, SP, DP & DPX		PROFESSIONAL HELP	1-3
DESCRIPTION	11-19	PURCHASING PARTS	1-3
INTERMEDIATE HOUSING TO LOWER UNIT SHIMMING	11-19	WHERE TO BEGIN	1-2
PROPELLER	11-22	HYDRAULIC VALVE LIFTER	
PROPELLER ROTATION CHANGE	11-25	4 CYLINDER	3-7
REMOVAL & INSTALLATION	11-22	FORD V8	5-8
RETAINING PAWL ADJUSTMENT	11-25	GM V6/V8	4-10
GIMBAL HOUSING	12-21	IDLE SPEED AND MIXTURE	2-31
GIMBAL RING	12-21	IGNITION SYSTEM	10-30
GM THROTTLE BODY FUEL INJECTION (TBI)	8-20	APPLICATIONS	10-30
& GM MULTI-POINT FUEL INJECTION (MPI)	8-20	IGNITION TIMING	2-25
CIRCUIT BREAKER	8-25	INSTRUMENTS AND GAUGES	10-56
CLEARING CODES	8-54	BATTERY GAUGE	10-57
DESCRIPTION AND OPERATION	8-20	FUEL GAUGE	10-56
DIAGNOSTIC TEST SCHEMATICS (GM)	8-48	OIL AND TEMPERATURE GAUGES	10-56
DIAGNOSTIC TROUBLE CODES (DTC)	8-53	SPEEDOMETER	10-57
DIAGNOSTIC TROUBLE CODE SCHEMATICS	8-59	TACHOMETER	10-58
ELECTRONIC CONTROL MODULE (ECM)	8-25	INTAKE MANIFOLD	
ENGINE COOLANT TEMPERATURE SENSOR (ECT)	8-25	FORD V8	5-8
FUEL CELL	8-26	GM V6/V8	4-12
FUEL INJECTORS	8-26	INTERMEDIATE EXHAUST PIPE	
FUEL LINE QUICK-CONNECT FITTINGS	8-28	FORD V8	5-13
FUEL METER BODY	8-29	GM V6/V8	4-20
FUEL METER COVER	8-29	LOWER EXHAUST PIPE (Y-PIPE)	
FUEL PRESSURE REGULATOR	8-30	FORD V8	5-14
FUEL PUMP	8-30	GM V6/V8	4-20
FUEL PUMP RELAY	8-32	INTERMEDIATE HOUSING	
FUEL RAIL	8-33	DESCRIPTION	11-16
GENERAL DIAGNOSTIC TESTS	8-42	INTERMEDIATE HOUSING TO LOWER UNIT SHIMMING	11-22
IDLE AIR CONTROL VALVE (IAC)	8-35	REMOVAL & INSTALLATION	11-18
INTAKE AIR TEMPERATURE SENSOR (IAT)	8-36	LOWER GEAR CASE (LOWER UNIT)—SX/DP-S	
KNOCK SENSOR (KS)	8-36	DESCRIPTION	12-13
KNOCK SENSOR MODULE	8-37	PROPELLER	12-16
MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)	8-37	REMOVAL & INSTALLATION	12-13
READING CODES	8-53	LUBRICATION POINTS	2-47

GIMBAL BEARING AND U-JOINTS	2-48	FORD V8	5-6
PROPELLER SHAFT	2-47	GM V6/V8	4-7
SHIFT CABLE AND TRANSMISSION		REAR MAIN OIL SEAL	
LINKAGE PIVOT POINTS	2-48	4 CYLINDER	3-11
STEERING SYSTEM	2-48	FORD V8	5-17
THROTTLE CABLE	2-47	GM V6/V8	4-27
MANUAL STEERING SYSTEM	15-2	REAR MAIN OIL SEAL RETAINER	
STEERING CABLE	15-2	4 CYLINDER	3-11
STEERING TUBE	15-2	GM V6/V8	4-26
TRIM TAB	15-3	REGULATIONS FOR YOUR BOAT	1-4
MEASURING TOOLS	1-22	REQUIRED SAFETY EQUIPMENT	1-5
MECHANICAL FUEL PUMP	7-39	REVERSE GATE	13-3
OIL FILTER BYPASS VALVE		ROCHESTER 2-GE AND NIKKI 2BBL	7-6
4 CYLINDER	3-11	ADJUSTMENT	7-9
GM V6/V8	4-25	ASSEMBLY	7-8
OIL PAN		CLEANING & INSPECTION	7-8
4 CYLINDER	3-10	DISASSEMBLY	7-6
FORD V8	5-14	REMOVAL & INSTALLATION	7-6
GM V6/V8	4-21	ROCHESTER 4ME 4 BBL	7-10
OIL PUMP		ADJUSTMENT	7-15
4 CYLINDER	3-10	ASSEMBLY	7-13
FORD V8	5-15	CLEANING & INSPECTION	7-13
GM V6/V8	4-23	DESCRIPTION	7-10
PCV VALVE	2-32	DISASSEMBLY	7-11
PIVOT HOUSING	12-19	REMOVAL & INSTALLATION	7-10
PJX WATERJET	13-2	ROCKER ARMS AND PUSH RODS	
BOWL BEARING	13-2	4 CYLINDER	3-6
REVERSE GATE	13-3	FORD V8	5-7
STEERING NOZZLE	13-4	GM V6/V8	4-9
THRUST BEARING AND SEAL HOUSING	13-4	SAFETY IN SERVICE	1-11
WEAR RING	13-7	SAFETY TOOLS	1-15
POWER STEERING	2-37	SENDING UNITS AND SWITCHES	10-58
BLEEDING	2-38	AUDIO WARNING SYSTEM	10-59
FLUID LEVEL	2-37	IGNITION SWITCH	10-59
POWER STEERING COOLER	15-13	OIL PRESSURE SENDING UNIT	10-58
POWER STEERING CYLINDER	15-8	WATER TEMPERATURE SENDER	10-58
POWER STEERING PUMP	15-9	SERIAL NUMBER IDENTIFICATION	
POWER STEERING SYSTEM	15-3	ENGINE	2-2
DESCRIPTION	15-3	STERN DRIVE	2-4
MAINTENANCE PROCEDURES	15-7	TRANSOM ASSEMBLY	2-4
POWER STEERING COOLER	15-13	SHIFT MECHANISM	
POWER STEERING PUMP	15-9	280/290, SP, DP & DPX	11-13
STEERING CABLE	15-7	SX/DP-S	12-12
STEERING CYLINDER	15-8	SPARK PLUGS	2-21
TESTING	15-6	SPARK PLUG WIRES	2-25
TRIM TAB	15-12	SPECIAL TOOLS	1-21
POWER TRIM AND TILT—290, SP, DP AND DPX	14-5	SPECIFICATIONS	
DESCRIPTION	14-5	ALTERNATOR	10-118
HYDRAULIC TRIM PUMP	14-9	CAPACITIES	2-65
TRIM CYLINDERS	14-6	CARBURETOR APPLICATIONS	7-47
TRIM INDICATOR GAUGE SENDING UNIT	14-8	CARBURETOR SPECIFICATIONS	7-49
TROUBLESHOOTING	14-5	CONVERSION FACTORS	1-25
POWER TRIM AND TILT—SX AND DP-S	14-11	DRIVE MODEL APPLICATIONS	12-26
DESCRIPTION	14-11	ENGINE MODEL APPLICATIONS	2-56
HYDRAULIC LINES & MANIFOLD	14-22	ENGINE SPECIFICATIONS	
SYSTEM BLEEDING	14-21	4 CYLINDER	3-20
SERVICE PRECAUTIONS	14-20	FORD V8	5-24
SYSTEM TESTING	14-20	GM V6/V8	4-45
TRIM LIMITER	14-22	MAINTENANCE INTERVALS	2-68
TRIM SENDER	14-21	METRIC BOLTS	1-26
TRIM/TILT PUMP ASSEMBLY	14-23	SAE BOLTS	1-26
TROUBLESHOOTING	4-13	TORQUE SPECIFICATIONS	
TRIM/TILT CYLINDER	14-29	4 CYLINDER	3-18
PROPELLER		CARBURETOR	7-46
280/290/SP MODELS	11-22	EFI	8-87
DP MODELS	11-23	FORD V8	5-23
DP-S MODELS	12-16	GM V6/V8	4-41
DPX MODELS	11-24	TROUBLESHOOTING	2-71
RETAINING PAWL ADJUSTMENT	11-25	TUNE-UP SPECIFICATIONS	2-58
ROTATION CHANGE	11-25	SPRING COMMISSIONING	2-54
SX MODELS	12-16	STARTER CIRCUIT	10-20
RAW WATER PUMP	9-4	DESCRIPTION AND OPERATION	10-20
REAR ENGINE MOUNTS		TROUBLESHOOTING THE STARTING SYSTEM	10-20
4 CYLINDER	3-6	STARTER MOTOR	10-20

15-18 MASTER INDEX

SOLENOID	10-29	TRANSOM SHIELD	11-26
STARTER MOTOR	10-20	DESCRIPTION	11-26
DESCRIPTION & OPERATION	10-20	STEERING FORK/HELMET	11-26
DISASSEMBLY & ASSEMBLY	10-24	TROUBLESHOOTING	1-11
PINION CLEARANCE	10-29	BASIC OPERATING PRINCIPLES	1-12
PRECAUTIONS	10-21	U-JOINT BELLOWS	
REMOVAL & INSTALLATION	10-23	280/290, SP, DP & DPX	11-6
TROUBLESHOOTING	10-21	SX/DP-S	12-21
STARTER SOLENOID	10-29	U-JOINT/DRIVE SHAFT ASSEMBLY	
STEERING CABLE	15-2	280/290, SP, DP & DPX	11-12
STEERING FORK/HELMET	11-26	SX/DP-S	12-11
STEERING TUBE	15-2	UNDERSTANDING AND TROUBLESHOOTING	
STEERING NOZZLE	13-4	ELECTRICAL SYSTEMS	10-2
STERN DRIVE UNIT	2-43	BASIC ELECTRICAL THEORY	10-2
FLUID LEVEL	2-43	ELECTRICAL COMPONENTS	10-2
CHECKING FOR WATER	2-44	TEST EQUIPMENT	10-4
DRAIN AND REFILL	2-44	WIRE AND CONNECTOR REPAIR	10-8
STERN DRIVE UNIT—280/290, SP, DP AND DPX	11-2	UPPER GEAR HOUSING—280/290, SP, DP & DPX	
DESCRIPTION	11-2	BACKLASH AND SHIM ADJUSTMENTS	11-6
EXHAUST BELLOWS	11-6	DESCRIPTION	11-6
REMOVAL & INSTALLATION	11-3	REMOVAL & INSTALLATION	11-6
STERN DRIVE UNIT	11-3	SHIFT MECHANISM	11-13
TROUBLESHOOTING	11-3	U-JOINT BELLOWS	11-13
U-JOINT BELLOWS	11-6	U-JOINT/DRIVE SHAFT ASSEMBLY	11-12
STERN DRIVE UNIT—SX/DP-S	12-2	UPPER GEAR HOUSING—SX/DP-S	
DESCRIPTION	12-2	BACKLASH AND SHIM ADJUSTMENTS	12-7
REMOVAL & INSTALLATION	12-3	DESCRIPTION	12-5
TRIM SENDING UNIT ADJUSTMENT	12-5	EXHAUST BELLOWS	12-21
TROUBLESHOOTING	12-2	REMOVAL & INSTALLATION	12-5
THERMOSTAT	2-16	SHIFT MECHANISM	12-12
REMOVAL & INSTALLATION	2-16	U-JOINT BELLOWS	12-21
TESTING	2-19	U-JOINT/DRIVE SHAFT ASSEMBLY	12-11
THRUST BEARING AND SEAL HOUSING	13-4	VALVE ADJUSTMENT	3-6
TIMING CHAIN AND SPROCKETS		VIBRATION DAMPER, PULLEY AND HUB	5-17
FORD V8	5-18	VOLVO ELECTRONIC ENGINE MANAGEMENT	
GM V6/V8	4-30	(EMM) SYSTEM	10-49
TOOLS	1-17	DESCRIPTION & OPERATION	10-49
ELECTRONIC TOOLS	1-21	SYSTEM COMPONENTS	10-50
HAND TOOLS	1-17	WATER PUMP	
MEASURING TOOLS	1-22	FORD	5-20
OTHER COMMON TOOLS	1-20	GM V6/V8	4-35
SPECIAL TOOLS	1-21	WATER (ENGINE) CIRCULATING PUMP	
TOOLS AND EQUIPMENT	1-15	FORD ENGINES	9-7
CHEMICALS	1-15	GM ENGINES	9-6
SAFETY TOOLS	1-15	WEAR RING	13-7
TRIM TAB		WINTER STORAGE	2-53
MANUAL	15-3		
POWER	15-12	WIRING DIAGRAMS	
TRANSOM ASSEMBLY	12-17	CARBURETOR	7-44
DESCRIPTION	12-17	CHARGING SYSTEM	10-62
GIMBAL HOUSING	12-21	ENGINE	10-82
GIMBAL RING	12-21	FUEL INJECTION	8-62
PIVOT HOUSING	12-19	IGNITION SYSTEM	10-75
REMOVAL & INSTALLATION	12-19	STARTING SYSTEM	10-68
SHIFT CABLE SLEEVE REPLACEMENT	12-24	TRIM/TILT	14-33