
Classic Family 70001

Basin mixer with out pop up drain



Please read this instruction carefully so as to avoid the installation difficulty.

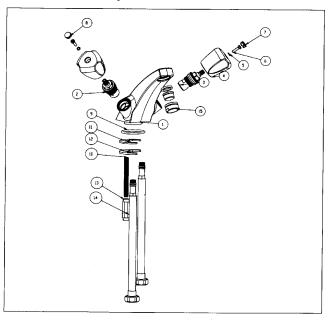


Installation Step	
2 31-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-	Hot J Cold

Components List

No.	Component	Material	Quantity
1	Main body	BRASS	1
2	Ceramic head part		1
3	Ceramic head part		1
4	Handle	ZINC	2
5	Spring shim	S.S 304	2
6	Screw	S.S 304	2
7	Blue index	ABS	1
8	Red index	ABS	1
9	O-ring	NBR	1
10	Fixing bolt	BRASS	1
11	Rubber fastening washer	NBR	1
12	Metal fastening washer	S.S 304	1
13	Nut	BRASS	1
14	Flexible connection hose		2
15	Aerator		1

Installation Fig

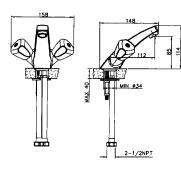

Flow rate Curves

L/mln

50 40 30 20 10 0 0.5 1 1.5 2 2.5 3 3.5 4 Bar Test pressure: 1.6MPa (16bar) Flow pressure:

Min 0.05MPa Max 1.60MPa

Recommended pressure: 0.1MPa to 0.8MPa (1 to 8 bar)

Note

- Ensure to clean the water supply pipe before installing to avoid being jammed.
- 2. The cold-water supply must be connected on the right and the hot-water supply on the left.
- 3. Check the installing dimension according to the Figure and ensure it is installed correctly.
- 4. Hot-water inlet must not be over 80°C.